



ONE SOURCE FOR MATS

Double Sided Tape


- Andersen Product Number - 1049
- Supplier – Uline Product Number-S-14669
- 3" X 108'
- 13.5 Mil Thickness

Taping Instructions –Waterhog Lift Truck Mats


- Place the Waterhog Lift Truck Mat face down with rubber backing side up
- Please tape along all 4 sides of tiles as close to edge as possible




- Inside the rectangle, create an X by placing tape sticky side down (Blue side up) from one corner diagonally to the opposite corner.

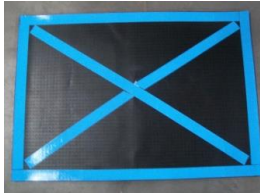

- Then place tile in the desired position. Carefully fold one half of the mat back exposing the blue tape.

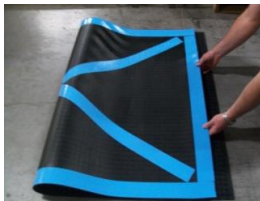

- Remove blue liner and trim back to the folded area. Then fold that half back into place and repeat on the other side.

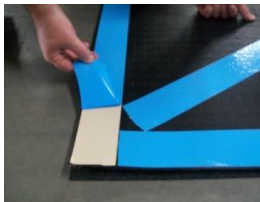

- To secure bond between tape and tile, apply pressure by walking around each side of the tile. At this time, installation of the tile is complete.

